

# EmiratesGreen

الامارات الخضراء لتجارته المعدات الكهربائية والميكانيكية  
**EmiratesGreen** Electrical & Mechanical Trading Est.

P.O. Box: 110507 | Phone: +971 2 491 0 757 | Abu Dhabi, U.A.E  
Email: [solar@emiratesgreen.com](mailto:solar@emiratesgreen.com) | Web: [www.emiratesgreen.ae](http://www.emiratesgreen.ae)



## **FX Circuit Board Replacement Instructions**

There are three circuit boards inside the FX inverter. Normally, only two of these boards are candidates for replacement; the FET board (large board that includes the battery terminals) and the control board (smallest board that includes the microprocessors). In some cases, however, the AC assembly (the “L”-shaped boards that include the AC terminal block) is defective.

Tools required to service the FX are:

- #2 Phillips screwdriver
- 3/8” flat blade screwdriver
- 4mm hex wrench (included with the boards shipped to you)
- 10mm deep socket on a 12” extension with ratchet
- 10mm wrenches (2 of them would be nice)
- Rubber-band wrench (usually used for opening jars)
- Flashlight
- 9-volt batteries (three if you have a 12V or 24V FX, six for a 48V FX)

The FET board is the “brawn” of the system. It processes all of the high current to and from the battery. This board contains the drive and overcurrent protection circuits. In general, when an inverter fails, it is often the power FETs that go. The FX is designed such that in the event of a FET failure, you replace only the one assembly. There are two green LED’s on the FET board that help to diagnose problems.

The control board is the “brains” of the inverter. It contains all of the processing power as well as the unit’s memory. The processors and memory are programmable and therefore possible to upgrade. It may be possible in the future to download new code into the control board in the field, but for now we will have to live with board swapping. There are either 15 or 20 (depending on the age of the board) green LED’s on the back of the control board to help diagnose problems with it.

The AC assembly is the I/O (Input/Output) portion of the FX. The AC assembly consists of the AC board and the connector board. They are soldered together to form one “L”-shaped assembly. This AC assembly will rarely require repair or upgrade.

Once you have determined that the FX must come apart, use the following guidelines to disassemble, repair, test and reassemble the unit. Repair should be

able to be done in the field although installers may want to take the FX back to the shop (where the power actually works) for verification testing.

#### STEP 1:

Turn off all breakers feeding into and out of the AC and DC leads. Disconnect the AC and battery connections. Unless you want to get really frustrated when you try to put the unit back together, take the extra 2 minutes to remove the unit from the wall so that you can work in the “gravity assist” position. (You may really hate life if you don’t do this)

#### STEP 2:

Remove the red and black plastic nuts with the rubber-band wrench (Figure 1). It doesn’t scratch or dent anything. Break down, go to Sears and get yourself one, (It opens jars too!) or else use a flat bladed screwdriver like you are loosing up a conduit locknut.



Figure 1

#### STEP 3:

Use a #2 Phillips tip screwdriver and remove the six screws inside the AC wiring compartment (Figure 2, Phillips). These are 6-32 x 1/2” stainless steel pan head screws (In case you lose any). Before getting into the unit you need to make sure you do not have a static charge built up on you or your clothes. The safest way to accomplish this is to stand naked in a mud puddle while disassembling the inverter. Another method would be to make sure you are wearing only 100% cotton clothes. Cotton does not build up a static charge. In addition, ground yourself by touching something like a water pipe, electrical ground conductor etc. in order to bleed off any charge. Static can destroy

boards. The form of static that is harmful is much less than what actually makes sparks. 30 volts can damage parts, so don't take chances and don't handle any boards unless static control measures have been taken.

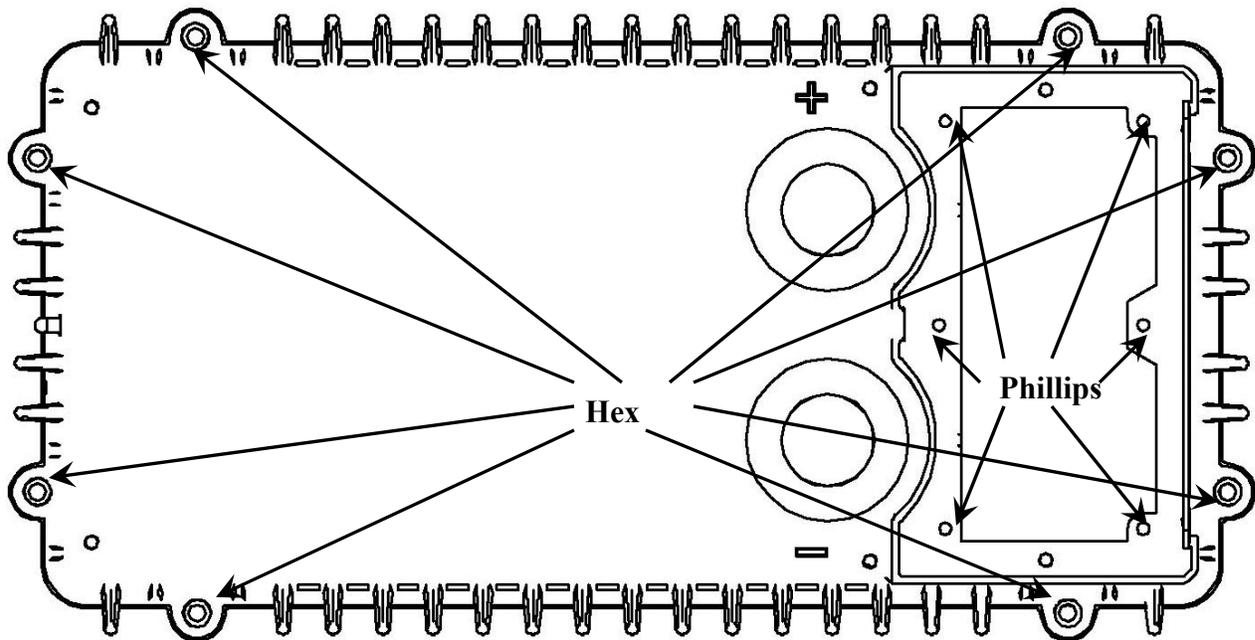


Figure 2

#### STEP 4:

Pay attention to this one or you'll hate yourself later! Use a 4mm Allen wrench (included) to remove the 8 stainless steel socket head cap screws that connect the top to the bottom casting (Figure 2, Hex). The FX has a fan mounted to the top cover. It plugs into the FET board. If you pull the top cover off without thinking, it will rip the wires right out of the connector. (This is where you will start swearing and your customer will become alarmed!) If this happens, you have two choices. 1: get new Molex crimp terminals and the special crimp tool to correctly fix the problem, or 2: solder the wires onto the sockets that are still attached to the mating connector on the FET board. Hint: cut some of the plastic away first so you can get to the pins. The red wire goes towards the bottom casting (the latch side of the connector). Figure 3 gives you an idea how long the wires are. There are two small O-rings that fit into slots of the battery terminals. If they aren't in their slots, they may be stuck to the underside of the top cover. Remove these small O-rings so they don't get lost. There is also a very large O-ring that travels the perimeter of the chassis. This doesn't need to be removed but if it comes out it should be reinstalled before the top cover is put back on. If this O-ring is too small, it can be stretched. The last thing that should be noted is the square piece of "Nomex" attached to the underside of the top cover (see Figure 3). Sometimes this piece falls out or is loose. If this is the case please use some silicone to glue it back in place. Make sure it is fairly dry before attaching the top cover.



Figure 3

**STEP 5:**

Determine which board or boards need replacing. Luckily, we've sent you boards that look identical or very similar to the boards that need replacing (you can thank us later). It may be the case, though rare, that one of the boards that we didn't send you is damaged. Please take a quick look around to see if anything is fishy (black soot, burnt circuit board, cracked IC's, etc). A flashlight can be used for this procedure and can be done without removing any boards.

**STEP 6:**

Next, remove the two ribbon cables (Figures 4 & 5) that connect the FET board and the AC assembly to the Control board. To remove the ribbon cables, use the levers at the top and bottom of the ribbon cable connections.

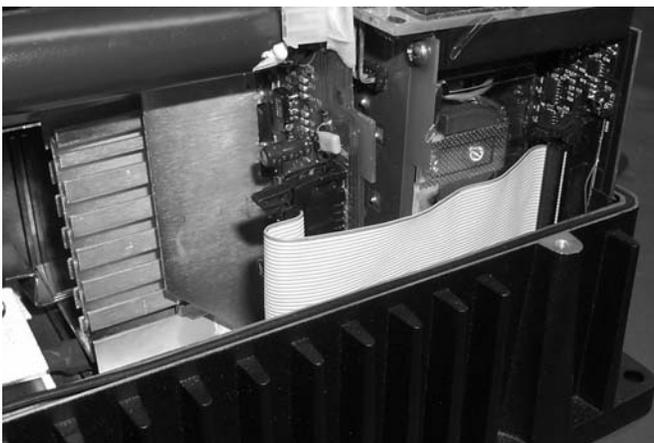


Figure 4

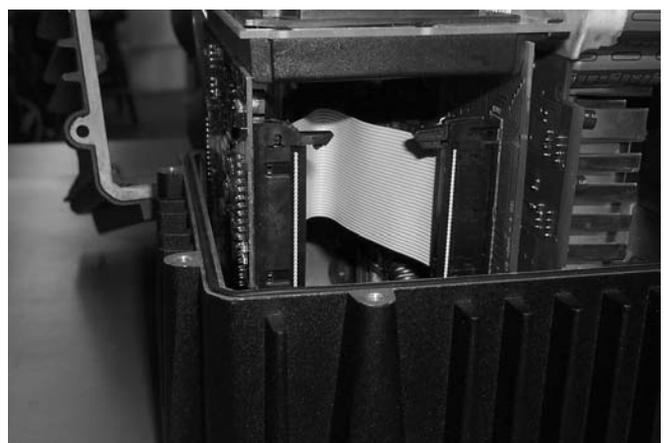


Figure 5

## STEP 7:

Now you get to remove the boards you want to replace.

### CONTROL BOARD:

Lift up on the AC assembly as shown in Figure 6 until you start pulling on the white and black AC output wires (located near the bottom of the AC assembly). You will have just enough room to sneak the control board out.

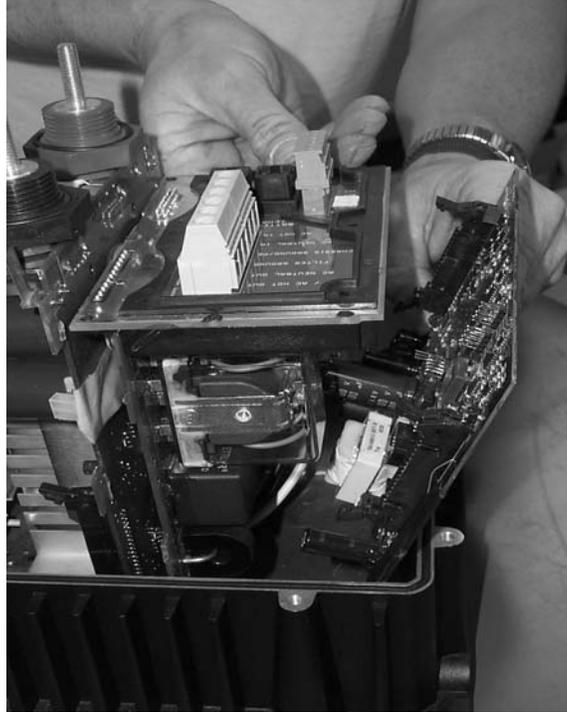


Figure 6

### AC ASSEMBLY:

Figure 7 shows the AC output wires. They must be disconnected to remove the AC assembly. The white Neutral wire is on the bottom and the black Hot wire is above it. Disconnect them by pulling them directly out from the board. It may help to keep the AC Assembly in the slot and using needle nose pliers when unplugging these tight wires.

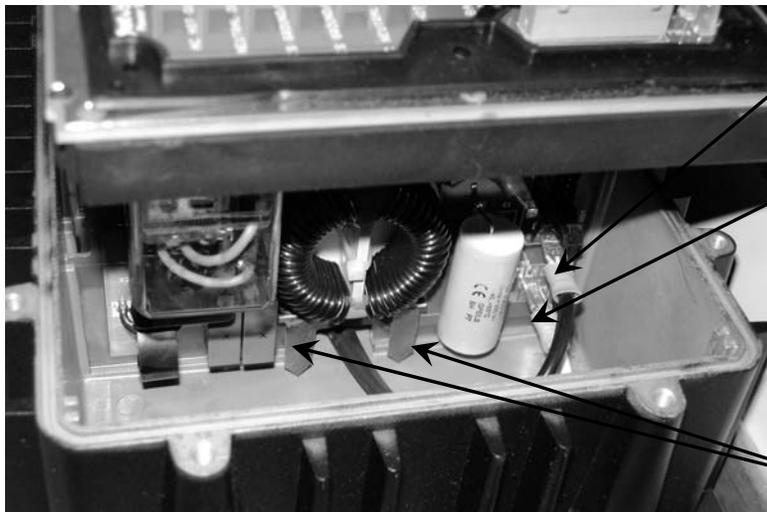


Figure 7

## FET BOARD:

Replacing the FET board requires removal of the ribbon cables as well as 2 bolts that hold the FET board in place. Bolt #1 will require a ratchet with a deep 10mm socket and a 12" extension (see Figure 8). Bolt #2 will require the two 10mm wrenches (see Figure 8). Pay attention to the washers when removing the bolts. The larger flat washer makes contact with the copper busbars. The smaller lock washer is between the flat washer and the bolt head. The bolts are 6mm .1 x 16mm in case they get lost. The bolts are stainless steel and therefore non-magnetic, so when you drop one into the chassis don't waste your time looking for a magnet. The bolts are tightened into connecting busbars that have pressed in nuts. You do not need to get your fingers underneath to retighten. The third thing that may need to be disconnected (depending on the model) is the "Thermister" clip, located underneath the ribbon cable connector (see Figure 8). This is most easily done after removing the bolts by lifting the FET board up until you can get your hand down there (a small child may be used for this operation, just kidding). The "Thermister" clip pulls off with a little bit of force. Make sure you retrieve any pieces of hardware that you may have dropped inside.

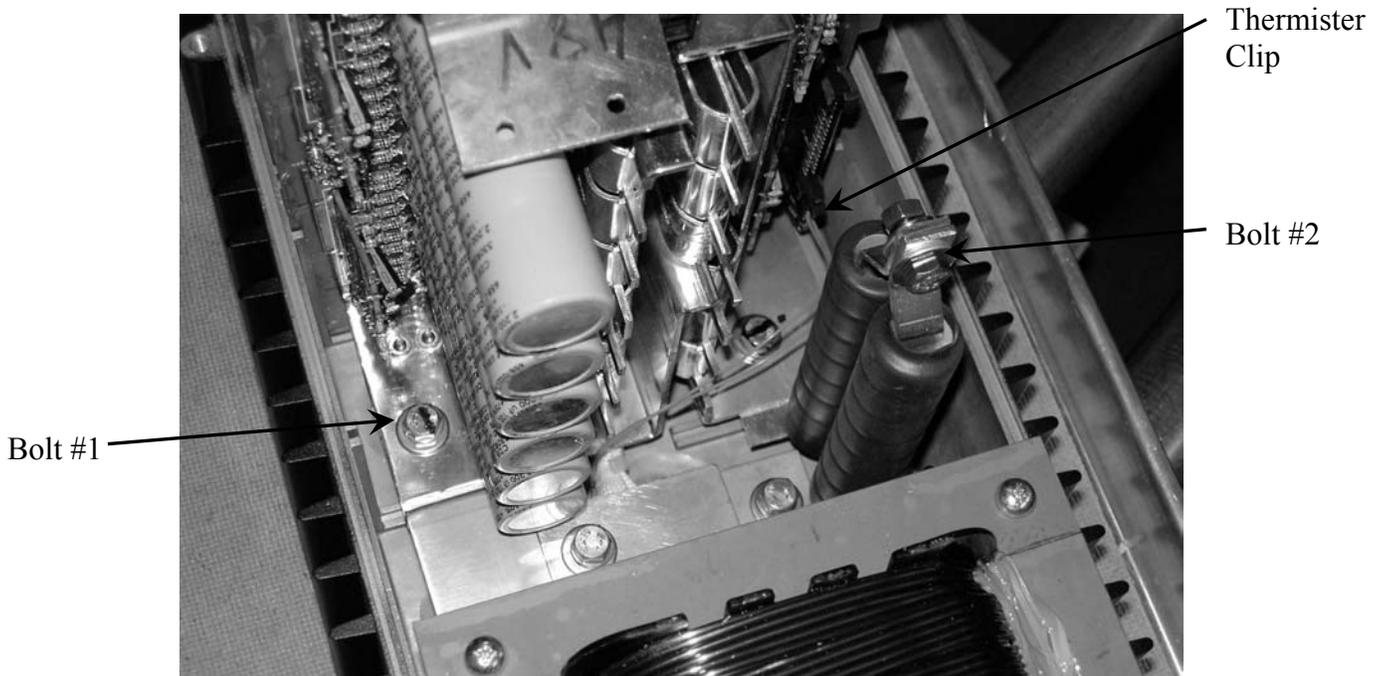


Figure 8

## STEP 8:

Reassemble: Install the new board or boards making sure that anti-static procedures have been observed.

FET BOARD: Check the FET board to see if the "Thermister" connector has a "Thermister" clip already installed. Remove it if you have the "Thermister" clip


in the chassis of your FX. Guide the FET board into the proper slot in the chassis and lower it ½ way down. If necessary, plug in the “Thermister” clip to its connector. Slide the FET board all the way down making sure that the AC output wires go through the gap on the bottom of the FET board. Bolt down the FET board and make sure they are tightened to 106 inch pounds.

**AC ASSEMBLY & CONTROL BOARD:** Slide the AC assembly ½ way down its slot. Connect the AC output wires to the AC assembly starting with the white wire (on bottom) and then the black wire (on top). With the AC assembly lifted up as high as possible, insert the Control board in its slot but do not lower it yet. There is a “Lip” on most of the AC assemblies that fits over the top edge of the Control board. Some AC assemblies don’t have this feature. If the “Lip” is present make sure it is over the edge of the Control board. At this point lower both boards down to the bottom making sure they are in their slots (very important, check this). Don’t push them down because the AC output wires may be lodged underneath the AC assembly. With a flashlight, check that the AC output wires go through the gap provided at the bottom of the AC assembly.

#### STEP 9:

Once the boards are properly seated and attached, you need to install the ribbon cables, the AC gasket and the O-rings.

**RIBBON CABLES:** There are two ribbon cables that are identical but since they fit into two different spaces they need to be pre-bent in two different ways. Figure 9 shows the proper bending of the ribbon cable that connects the Control board to the AC assembly. Figure 10 shows the proper bending of the ribbon cable that connects the Control board to the FET board. This one is a little tricky. The ribbon cables have a polarity feature so make sure the notches are in the correct places. If not, flip the ribbon cable and try again.

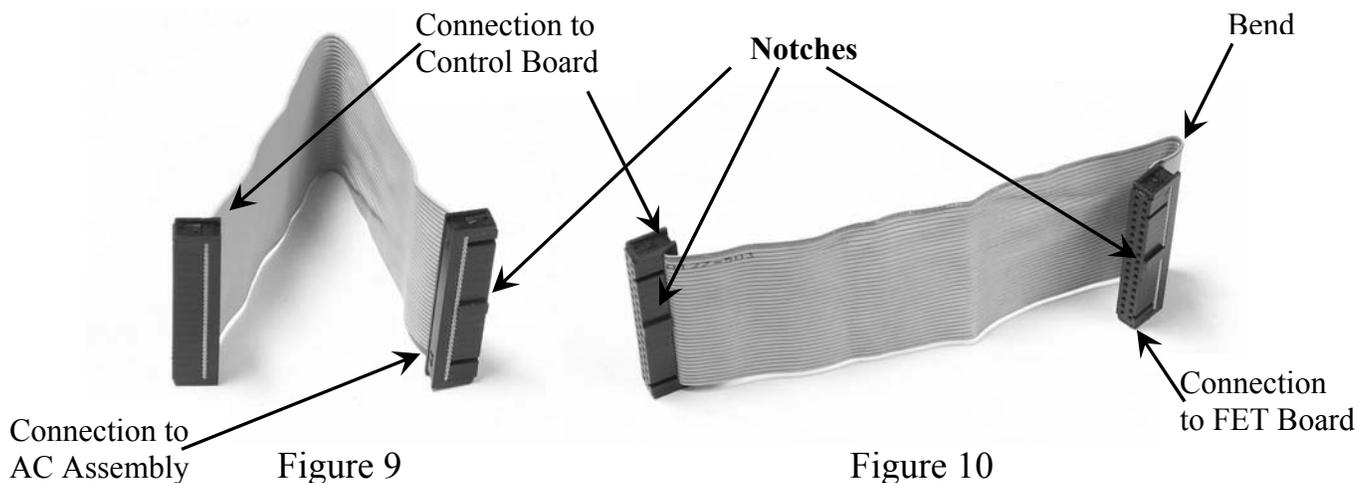

Install the ribbon cables between the boards following the connection instructions in Figures 9 & 10. After making the “Connection to the FET

Board”, curl the “Bend” in the ribbon cable towards the inside of the FX. This will pull the ribbon cable inward and then it will be less likely to be pinched between the chassis and the top cover when you put on the top cover. This is a major source of problems, pinching the ribbon cable will destroy the boards! Make sure the ribbon cables are pushed all the way in and then tape the ribbon cable to the clear relay if necessary. Again, be sure the boards are all in their respective card guides. The AC board especially likes to go off to one side or the other if you are not careful.

**AC GASKET:** Between the AC assembly and the top cover is a gasket that keeps water from entering and also functions as isolation. Some AC assemblies have this AC gasket permanently attached while some don't. If you have received a new AC assembly chances are it will come with a separate AC gasket. This gasket has six holes for screws to pass through. Place the AC gasket on the AC assembly so that the holes in the gasket line up with the holes in the AC assembly.

**O-RINGS:** There are two small O-rings that need to be placed in the slots on the FET board battery terminals. They may be stuck to the underside of the top cover or they may have stayed in the FET board itself. These O-rings are necessary if you have a “Sealed” FX that is in a corrosive environment. If not then you may lose them and not feel too stressed out. There is also a very large O-ring that fits in the slot that travels the perimeter of the chassis. It also may be stuck to the top cover or it may be in the slot already. Same deal applies to your stress level.

#### STEP 10:

**Test:** Now that the unit is electrically back together, it should be tested on a bench power supply or a series of 9-volt batteries prior to applying battery power. For 12-volt and 24-volt FX's use three 9-volt batteries in series (alligator clips work nicely) but for 48 volt FX's use at least five maybe six 9-volt batteries in series. These batteries will probably be toast afterwards but it's cheaper than blowing up another FX board. Batteries and power supplies are current limited and therefore forgiving of assembly errors. Large battery banks are not forgiving at all and can turn all of your hard work into a lot of smoke due to a simple assembly error.

Hook up your bench supply (Or your 9 volt batteries) to the battery terminals making sure the battery voltage is set according to the unit under test. The inverter should go through a boot up routine. The red “Low” battery LED will go on and then change to the yellow “OK” LED and then it may change to the green “Full” LED. The fan will also come on if plugged in (if the fan isn't plugged in, the “Error” LED will blink, no big deal. After about 5 seconds the

FX will produce AC and the green “Inverter” LED will glow. Check the output terminals with a volt meter or small load to confirm the presence of AC power. It should read about 110-120VAC unloaded for a Domestic FX or 210-230VAC for an Export FX. Once you have confirmed the inverter power up sequence, turn the unit off. To test the charger section, connect 120 or 230 volts AC (as applicable) to the hot and neutral AC input terminals. Turn on the power supply (or batteries) and observe the boot up routine. This time there will be an additional stage. After 30 seconds the inverter LED will go out and the charger LED will light. The unit is now in charger mode. If the FX follows this boot up routine, it works. Turn power off and disconnect everything.

#### STEP 11:

Now you can attach the top cover to the chassis and throw (figuratively speaking) the FX back up on the wall. The easiest way to do this is to situate the FX so that the transformer is to your left and the AC terminal block is to your right. Make sure that the O-rings and the AC gasket are in place. Plug the fan into the FET board. Now lift the top cover over the chassis and lower it down so that the battery terminals come through the holes provided. You may have to push the battery terminals towards the AC terminal block and push down a little bit to lower the top cover. Before you lower the top cover all the way, make sure the AC gasket is not pinched under the top cover. Next, insert (but do not tighten) the six screws that connect the top cover to the AC assembly. Now, put on the battery terminal nuts and tighten down. Now you can tighten the six screws on the AC assembly to 6 inch-pounds. Finally, insert the eight hex screws that attach the top cover to the chassis. Tighten these down to 12 inch-pounds in the accepted “Star” process, going from side to side until they are all tightened. Re-tighten the screws once the unit is warm or hot. The screws compress the rubber gasket and complete the grounds for AC as well as the unit’s own filters. Once again hook up the power supply and verify that nothing was damaged while installing the cover. It is possible to damage the control board if the card guides are misaligned.

#### STEP 12:

The inverter is now finished. If you are an installer and have just used up your spare boards, pack the broken board(s) well and send them back to the factory for repair or replacement. PLEASE REFERENCE THE **RMA #** WHEN YOU SHIP THE BOARDS BACK! It helps, no really, it does.

G’Day Mate!