

# EmiratesGreen

الامارات الخضراء لتجارته المعدات الكهربائية والميكانيكية  
**EmiratesGreen** Electrical & Mechanical Trading Est.

P.O. Box: 110507 | Phone: +971 2 491 0 757 | Abu Dhabi, U.A.E  
Email: [solar@emiratesgreen.com](mailto:solar@emiratesgreen.com) | Web: [www.emiratesgreen.ae](http://www.emiratesgreen.ae)



## SP PRO Solar Hybrid Firmware Upgrade

### Attention

Updating the firmware within SP PRO units to support the new Solar Hybrid Control system will remove the previous settings used for tariff optimisation and they will no longer have any effect on the SP PRO operation.

Solar Hybrid Control applies to SP PRO Firmware: 7.0 and later. This Technical Bulletin only applies to the re-configuration of a SP PRO where the firmware is being updated from a firmware revision less than 7.0 to a firmware revision 7.0 or above.

### Configuration Settings Affected

Any SP PRO system using the following Configuration Settings will need to be re-configured after an update to Solar Hybrid Control firmware:

- Inverter – Inverter Lockout Schedule 1 – 4
- AC Source – AC Input Capacity Schedule 1 – 4
- AC Source – Charger Lockout Schedule 1 – 4
- AC Source – AC Input Lockout
- AC Source – AC Export Power Limit
- Inputs/ Outputs – Charger Lockout Input
- Inputs/ Outputs – Power Override Input

The ability to perform these functions is retained however they have been redefined into a single Solar Hybrid Control group with eight schedules which contain all of the functionality.

### Solar Hybrid Three Phase System

To take full advantage of the new Solar Hybrid settings in a three phase SP PRO configuration, the Battery wiring and shunt sense wiring to the SP PRO inverters will need to be changed.

The new configuration will allow each of the three SP PRO inverters to individually keep track of the battery State of Charge (SoC) and their share of any DC coupled renewable charging source. Each of the three phases is then able to be programmed to the desired Solar Hybrid Schedule whilst allowing, as required, the export of their share of both DC coupled and AC coupled renewable energy (such as PV Solar).

For full details please refer to installation note *IN0016\_xx 004573 SP PRO 3 Phase Installation.doc* (xx should be 07 or higher) available on the support page of the Selectronic Web Site <http://www.selectronic.com.au>.

# SP PRO Interactive Inverter Charger Technical Bulletin



## Solar Hybrid Control Settings

The Solar Hybrid Control settings define when, the amount and to what level the stored battery energy is utilised in conjunction with the connected renewable energy sources to optimise their use. Optimum use of the renewable and stored battery energy gives you control over when and the amount of grid energy if any is required to power the connected loads. The use of the settings below in combination allows this flexibility.

## PRIORITY 1 TO PRIORITY 8

The Solar Hybrid Control is made up of eight groups of identical settings with each assigned and labelled a priority level from 1 to 8 with priority 1 being the highest. If two or more Priority Schedules are active at the same time, only the highest priority settings will apply.

When a Priority schedule is active, all of the configuration options with the group are active during that time.

## ACTIVATION

Activation controls when the limits and controls set for that Priority schedule become operational.

When converting configuration settings that operate over a time frame, set the same times in the Date Time activation as for the original settings.

When converting configuration settings over that operate from a digital input, set the Digital Control Activation Input as for the original settings.

# SP PRO Interactive Inverter Charger Technical Bulletin



## Date Time Activation

Select the inclusive date range over which you want the Priority Schedule to be activated. By default the range is all year and only require adjustment if part of a year such as summer are required.

Select the days of the week (Mon, Tues, ..., Sat-Sun, Mon-Fri, All) for the schedule to activate. Select the Start Time and Stop Time (in 24 hr format) for the schedule to active. If the Stop Time is earlier than the Start Time then the Stop time is for the following day.

## Digital Control Activation

A digital input may also be used to activate the Priority schedule. This input will activate the Priority schedule regardless of the Date Time Activation.

Both Activation types can be used together remembering if one or the other is active then the Priority Schedule will be active.

During Activation, an output can also be energised to signal other devices. Set the Active Output to the Digital Output as required.

### Enable Date Time Activation

Enabled

Active Dates

**Begin Date**  
[1 Jan - 31 Dec]  
01 Jan

**End Date**  
[1 Jan - 31 Dec]  
31 Dec

Active Time

**Day**  
All

**Start Time**  
[00:00 - 23:59]  
00:00

**Stop Time**  
[00:00 - 23:59]  
00:00

Digital Control

**Activation Input**  
None

**Activation Input Edge**  
Rising

**Active Output**  
None

# SP PRO Interactive Inverter Charger Technical Bulletin



## Convert Configuration Settings

The information below is to detail how to use your existing settings within the new Solar Hybrid configuration. Please consult the SP LINK User Manual for full details.

### INVERTER – INVERTER LOCKOUT SCHEDULE 1 – 4 → SOLAR HYBRID - INVERTER DISCONNECT

- Choose which Priority schedule will activate the Inverter Disconnect.

Original Setting → Solar Hybrid Setting

The screenshot shows the 'Inverter Lockout' and 'Inverter Control' sections. The 'Inverter Lockout' section has two columns for 'Schedule 1' and 'Schedule 2'. The 'Inverter Control' section has 'AC Load Support Limit', 'SoC Support Limit', and 'Inverter Disconnect'. Green arrows point from the 'Schedule 1' and 'Schedule 2' settings to the 'Active Date Time Activation' and 'Active Time' settings, and from the 'Inverter Disconnect' dropdown to the 'Inverter Disconnect' setting in the 'Inverter Control' section.

- Enable Date Time Activation and Inverter Disconnect
- Set Active Time Day to same as Sched. X Day
- Set Start Time to same as Sched. X Start Time
- Set Stop Time to same as Sched. X Stop Time

Remember:-

- You can have multiple control actions under each Priority schedule.
- If two or more Priority Schedules are active at the same time, only the highest priority settings will apply.

# SP PRO Interactive Inverter Charger Technical Bulletin



## AC SOURCE – CHARGER LOCKOUT SCHEDULE 1 – 4 → SOLAR HYBRID – CHARGER CONTROL

- Choose which Priority schedule will activate the Charger Lockout.

Original Setting → Solar Hybrid Setting

Charger Lockout Schedule

**Schedule 1**  
Disabled

**Schedule 2**  
Disabled

Sched. 1 Day: All

Sched. 2 Day: All

Sched. 1 Start Time: 00:00

Sched. 2 Start Time: 00:00

Sched. 1 Stop Time: 00:00

Sched. 2 Stop Time: 00:00

**Enable Date Time Activation**  
Enabled

Active Dates

Begin Date: 01 Jan

End Date: 31 Dec

Active Time

Day: All

Start Time: 00:00

Stop Time: 00:00

Charger Control

**Battery Charging**  
Charging On

**Restricted Charge Limit**  
[0 - 217.4 A]  
208.3 A

- Enable Date Time Activation and set Battery Charging to Charging Off or Renewable Only
- Set Active Time Day to same as Sched. X Day
- Set Start Time to same as Sched. X Start Time
- Set Stop Time to same as Sched. X Stop Time

Remember:-

- You can have multiple control actions under each Priority schedule.
- If two or more Priority Schedules are active at the same time, only the highest priority settings will apply.

# SP PRO Interactive Inverter Charger Technical Bulletin



## AC SOURCE – AC INPUT CAPACITY SCHEDULE 1 – 4 → SOLAR HYBRID – GRID INPUT LIMIT

- Choose which Priority schedule will activate the Grid Input Limit

Original Setting → Solar Hybrid Setting

The screenshot shows the configuration interface for the AC Source. On the left, under 'AC Input Capacity Schedule', there are two columns for 'Schedule 1' and 'Schedule 2'. The 'Original Setting' (left) shows both schedules as 'Disabled'. The 'Solar Hybrid Setting' (right) shows 'Enable Date Time Activation' set to 'Enabled'. The 'AC Source Power 1' is set to 50 and 3.8 kVA. The 'AC Source Power 2' is set to 50 and 3.8 kVA. The 'Active Dates' are set to 'Begin Date [1 Jan - 31 Dec]' and 'End Date [1 Jan - 31 Dec]'. The 'Active Time' is set to 'Day: All', 'Start Time: 00:00', and 'Stop Time: 00:00'. On the right, the 'AC Source' section shows 'Grid Input Limit' set to 208.3 A and 'Grid Export Limit' set to 20.8 A. The 'Grid Disconnect' is set to 'Disabled'.

- Enable Date Time Activation
- Set Grid Input Limit to same as AC Source Power x
- Set Active Time Day to same as Sched. X Day
- Set Start Time to same as Sched. X Start Time
- Set Stop Time to same as Sched. X Stop Time

Remember:-

- You can have multiple control actions under each Priority schedule.
- If two or more Priority Schedules are active at the same time, only the highest priority settings will apply.

# SP PRO Interactive Inverter Charger Technical Bulletin



## AC SOURCE – AC INPUT LOCKOUT → SOLAR HYBRID – GRID DISCONNECT

- Choose which Priority schedule will activate the Grid Disconnect

Original Setting → Solar Hybrid Setting

The screenshot displays three main configuration panels. On the left, the 'AC Input Lockout' panel shows 'Lockout' set to 'Disabled', 'Start Time' at '06:00', and 'End Time' at '23:00'. In the center, the 'Enable Date Time Activation' panel has 'Enable Date Time Activation' set to 'Enabled', 'Active Dates' from '01 Jan' to '31 Dec', and 'Active Time' from '00:00' to '00:00'. On the right, the 'AC Source' panel shows 'Grid Input Limit' at '208.3 A', 'Grid Export Limit' at '20.8 A', and 'Grid Disconnect' set to 'Disabled'. Green arrows point from the 'Disabled' lockout setting to the 'Enabled' activation setting, from the '06:00' start time to the '00:00' start time, from the '23:00' end time to the '00:00' stop time, and from the 'Disabled' lockout setting to the 'Disabled' disconnect setting.

- Enable Date Time Activation
- Set Grid Input Limit to same as AC Source Power x
- Set Active Time Day – No previous setting
- Set Start Time to same as Sched. X Start Time
- Set Stop Time to same as Sched. X Stop Time

Remember:-

- You can have multiple control actions under each Priority schedule.
- If two or more Priority Schedules are active at the same time, only the highest priority settings will apply.



# SP PRO Interactive Inverter Charger Technical Bulletin



## AC SOURCE – AC INPUT LOCKOUT → SOLAR HYBRID – GRID DISCONNECT

- Choose which Priority schedule will activate the Grid Export Limit

Original Setting → Solar Hybrid Setting

The screenshot shows three panels of settings. The left panel, 'AC Export Power Limit', has 'Independent Limit' set to 'Disabled' and 'AC Export Power' set to 5.0 kW. The middle panel, 'Enable Date Time Activation', has 'Enabled' selected, 'Begin Date' as 01 Jan, 'End Date' as 31 Dec, 'Active Time Day' as 'All', and 'Start Time' and 'Stop Time' both as 00:00. The right panel, 'AC Source', has 'Grid Input Limit' at 208.3 A, 'Grid Export Limit' at 20.8 A, and 'Grid Disconnect' set to 'Disabled'. Green arrows point from the 'Independent Limit' dropdown to the 'Enabled' dropdown, from the '5.0 kW' value to the '20.8 A' value, and from the 'All' dropdown to the '20.8 A' value.

- Enable Date Time Activation
- Set Grid Export Limit to same as AC Export Power
- Set Active Time Day – No previous setting
- Set Start Time – No previous setting
- Set Stop Time – No previous setting

Remember:-

- You can have multiple control actions under each Priority schedule.
- If two or more Priority Schedules are active at the same time, only the highest priority settings will apply.


# SP PRO Interactive Inverter Charger Technical Bulletin



## INPUTS / OUTPUTS – CHARGER LOCKOUT INPUT → SOLAR HYBRID – GRID DISCONNECT

- Choose which Priority schedule will activate the Grid Export Limit

Original Setting → Solar Hybrid Setting

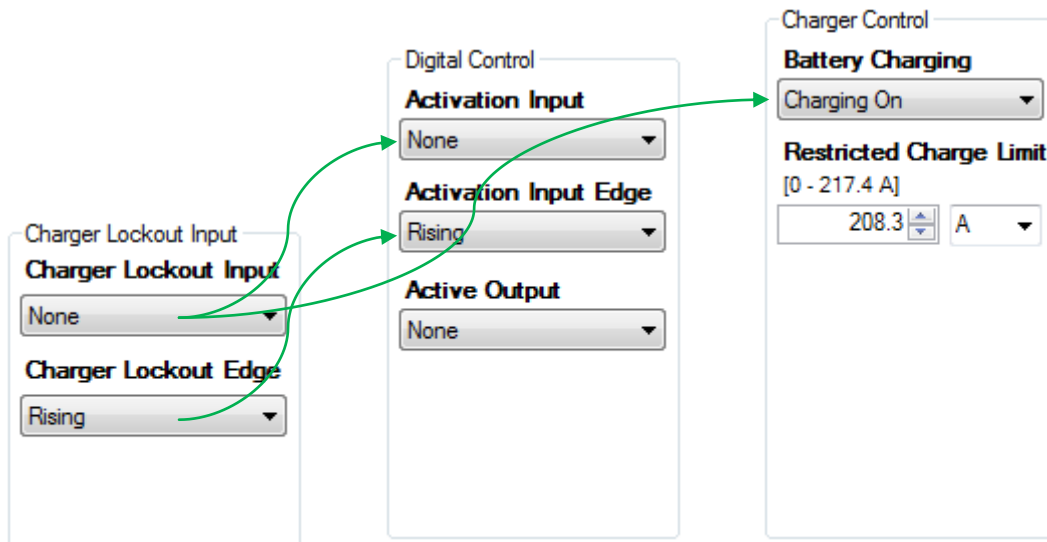

- Set Activation Input to same as Charger Lockout Input
- Set Activation Input Edge to same as Charger Lockout Edge
- Set Battery Charging to Charging Off or Renewable Only

Remember:-

- You can have multiple control actions under each Priority schedule.
- If two or more Priority Schedules are active at the same time, only the highest priority settings will apply.

# SP PRO Interactive Inverter Charger Technical Bulletin




## INPUTS / OUTPUTS – POWER OVERRIDE INPUT → SOLAR HYBRID – POWER OVERRIDE

*Note: No function within standard SP PRO units. Contact Selectronic for details.*

- Choose which Priority schedule will activate the Power Override

Original Setting → Solar Hybrid Setting

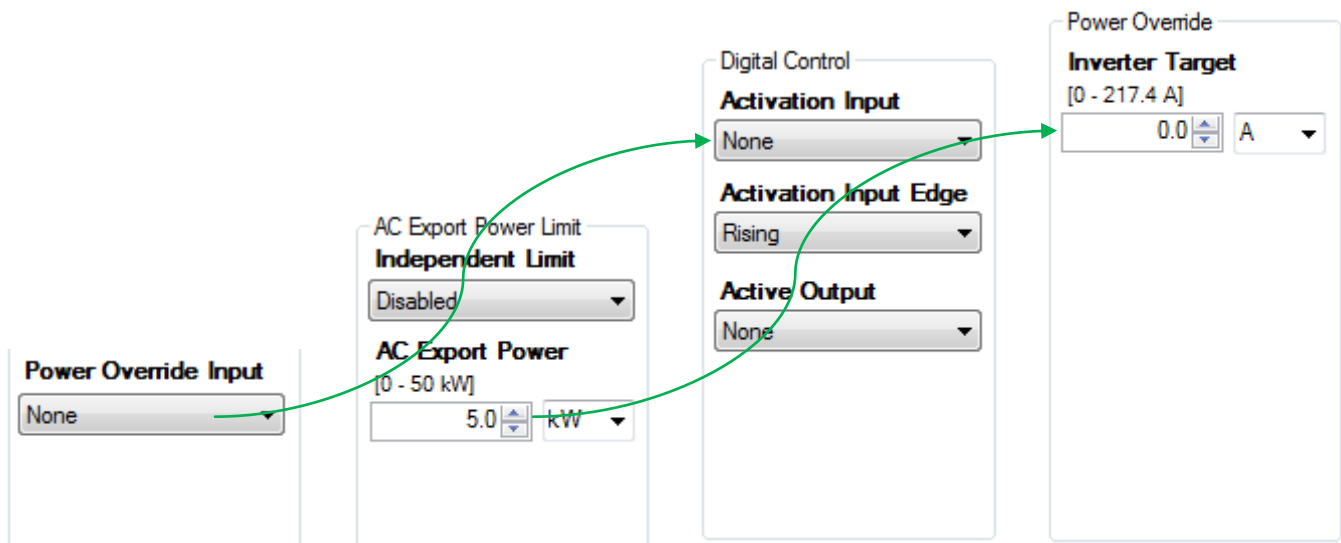

- Set Activation Input to same as Power Override Input
- Set Activation Input Edge
- Set Inverter Target to same as AC Export Power

Remember:-

- You can have multiple control actions under each Priority schedule.
- If two or more Priority Schedules are active at the same time, only the highest priority settings will apply.

### Additional Information

Selectronic Support Team – [support@selectronic.com.au](mailto:support@selectronic.com.au)

Selectronic web site – <http://www.selectronic.com.au>